

Shenzhen Jingcai Intelligent Co., Ltd

Welcome to the JCZN Workshop!

Table of contents	
一、Introduction・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	2
二、Installing using Arduino IDE・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	2
三、sample program usage・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	. 1



Shenzhen Jingcai Intelligent Co., Ltd

Getting Started

Introduction

The objective of this post is to explain how to upload an Arduino program to the JC1060P470 module, from JCZN.

http://www.jczn1688.com/zlxz

The ESP32-P4 is powered by a dual-core RISC-V CPU featuring Al instruction extensions, an advanced memory subsystem, and integrated high-speed peripherals.

Powered by a dual-core RISC-V CPU running at speeds up to 400 MHz, the ESP32-P4 also boasts support for single-precision FPU and AI extensions, providing essential

ESP32-P4 itself does not have WiFi and Bluetooth functions. Use ESP-Hosted to connect to the ESP32-C6 wireless SOC through the SDIO/SPI/UART interface.

Installing using Arduino IDE

Programming the ESP32

An easy way to get started is by using the familiar Arduino IDE. While this is not necessarily the best environment for working with the ESP32, it has the advantage of being a familiar application, so the learning curve is flattened.

We will be using the Arduino IDE for our experiments.

1, Installing using Arduino IDE


we first need to install version 2.3.4 of the Arduino IDE (or greater), for example, the Arduino installation was in "C/Programs(x86)/Arduino".

download release link:

https://www.arduino.cc/en/software



Shenzhen Jingcai Intelligent Co., Ltd

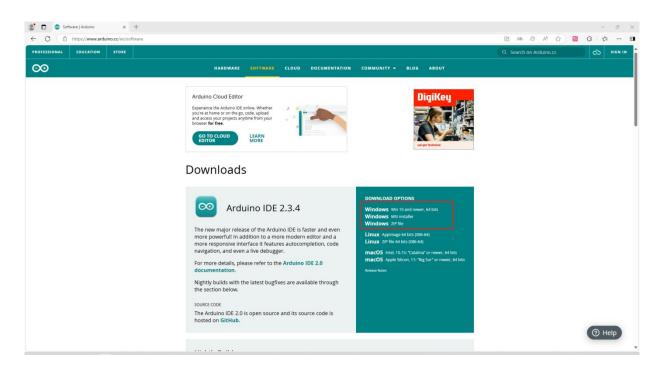

2, This is the way to install Arduino-ESP32 directly from the Arduino IDE.

Add Boards Manager Entry


Here is what you need to do to install the ESP32 boards into the Arduino IDE:

(1) Open the Arduino IDE.

- (2) Click on the File menu on the top menu bar.
- (3) Click on the Preferences menu item. This will open a Preferences dialog box.



Shenzhen Jingcai Intelligent Co., Ltd

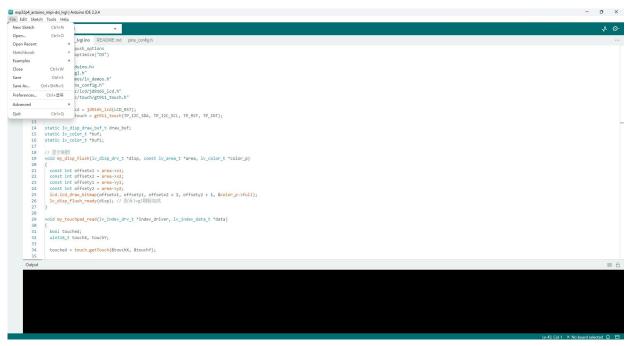


- (4) You should be on the Settings tab in the Preferences dialog box by default.
- (5) Look for the textbox labeled "Additional Boards Manager URLs".
- (6) If there is already text in this box add a coma at the end of it, then follow the next step.
- (7) Paste the following link into the text box:

Stable release link:

https://espressif.github.io/arduino-esp32/package_esp32_dev_index.json

(8) Click the OK button to save the setting.


The textbox with the JSON link in it is illustrated here:

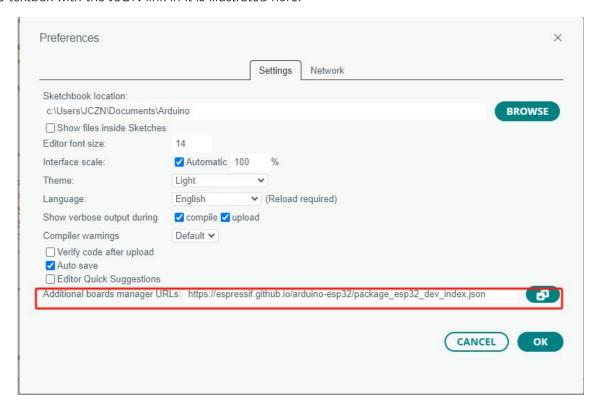




Shenzhen Jingcai Intelligent Co., Ltd

- (9) In the Arduino IDE click on the Tools menu on the top menu bar.
- (10) Scroll down to the Board: entry
- (11) A submenu will open when you highlight the Board: entry.
- (12) At the top of the submenu is Boards Manager. Click on it to open the Boards Manager dialog box.
- (13)In the search box in the Boards Manager enter "esp32".

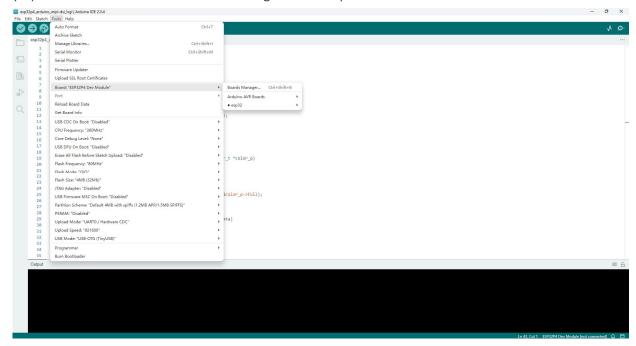

(14) You should see an entry for "esp32 by Espressif Systems". Highlight this entry and click on the Install button.


This will install the ESP32 boards into your Arduino IDE

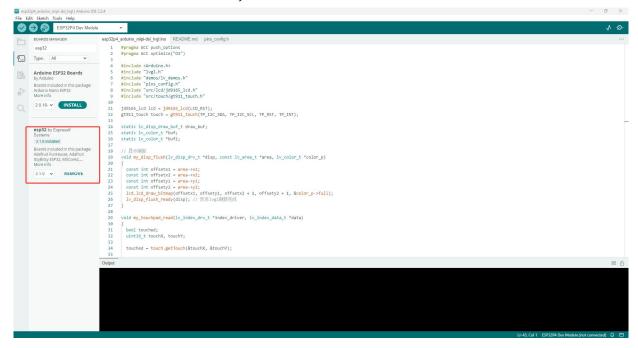




Shenzhen Jingcai Intelligent Co., Ltd

Once the installation completes, we need to select the correct board options for the "ESP32 Arduino" board. In the board type, in the tools tab, we choose "ESP32P4 Dev Module".

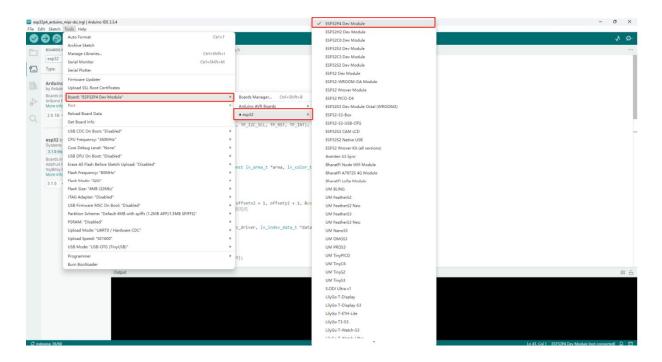


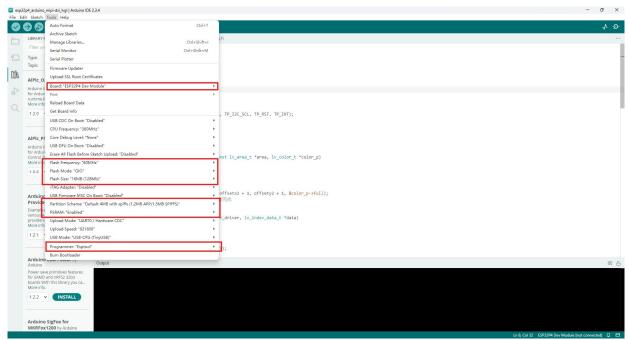

Set and In the programmer entry of the same tab, we choose "esptool".



Shenzhen Jingcai Intelligent Co., Ltd

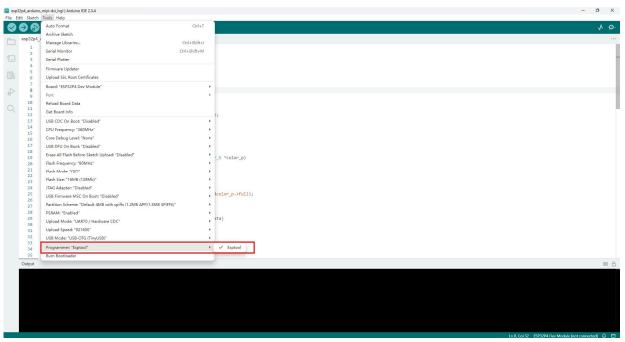

It's important to note that after the code is uploaded, the device will start to run it. So, if we want to upload a new program, wee need to reset the power of the device, in order to guarantee that it enters flashing mode again.

First program

Since this platform is based on Arduino, we can use many of the usual functions. As an example for the first program, the code bellow starts the Serial port and prints "hello from ESP32" every second.


```
void setup() {
    Serial.begin(115200);
}

void loop() {
    Serial.println("hello from ESP32");
    delay(1000);
}
```

If everything is working fine, we will see the output in the serial console shown.



Shenzhen Jingcai Intelligent Co., Ltd

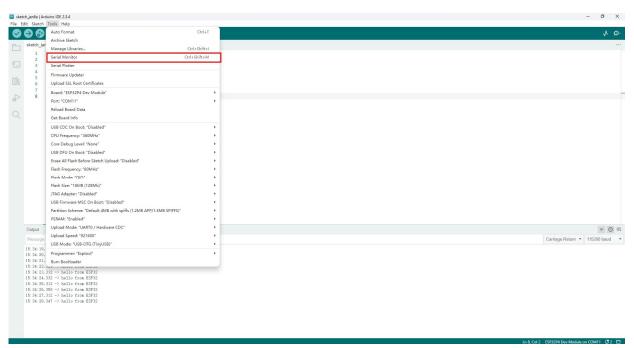

Again thank you for so much concern.. Hopefully, it's the beginning of a wonderful relationship!

Sample program usage


At present, only a preliminary explanation and introductory use are given to the samples displayed on the screen, and the corresponding examples in the data center are found, as shown in the figure:



Open the library manager in Arduino, search for lvgl, and click instal.



Shenzhen Jingcai Intelligent Co., Ltd

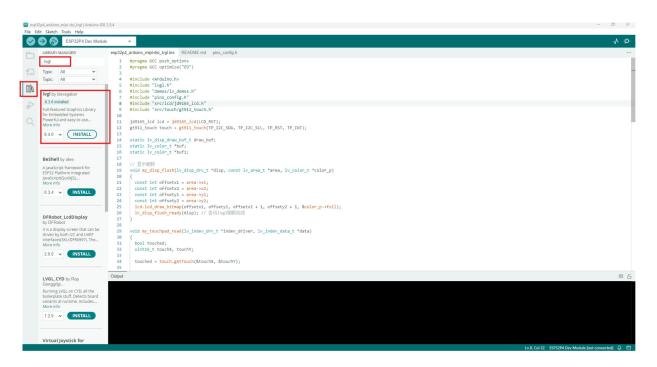

About the use of touch and LVGL:

Find the data center 1_1_Lvgl_v8

As shown:




Download one library files .

Lvgl, > v8.3.0




Shenzhen Jingcai Intelligent Co., Ltd

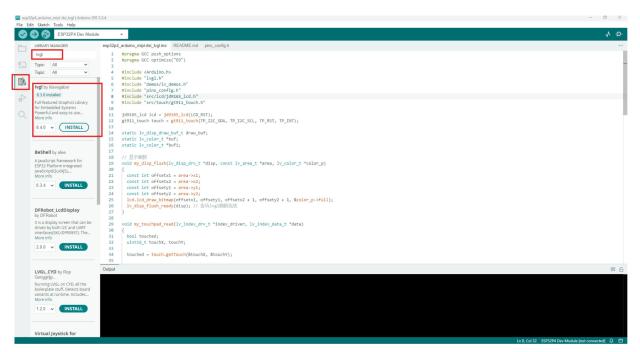

Copy the lv_conf.h of the data center.

As shown:

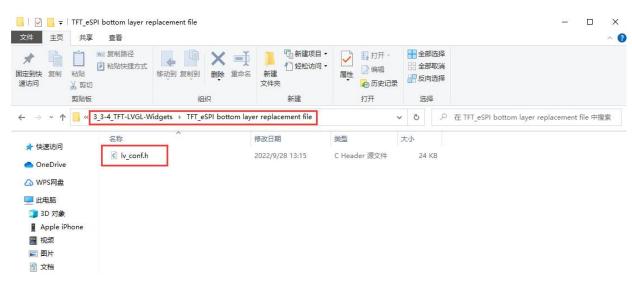


Put this file under the arduino library file, it must be in the same root directory as the library lvgl .

As shown:




Shenzhen Jingcai Intelligent Co., Ltd

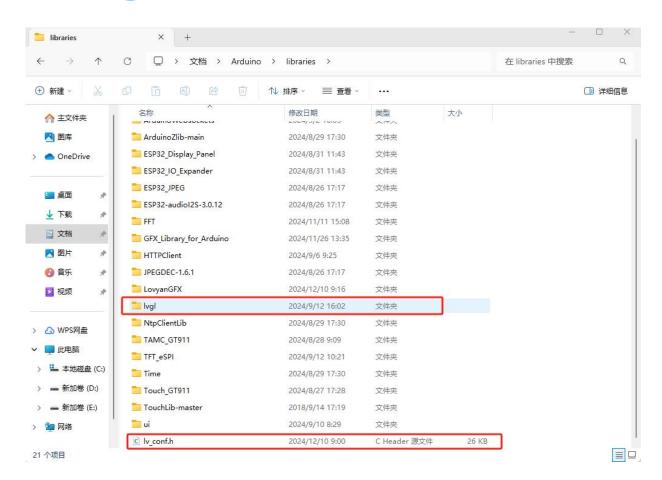

Three-Lvgl demos The file is copied to the SRC folder As shown:



Shenzhen Jingcai Intelligent Co., Ltd

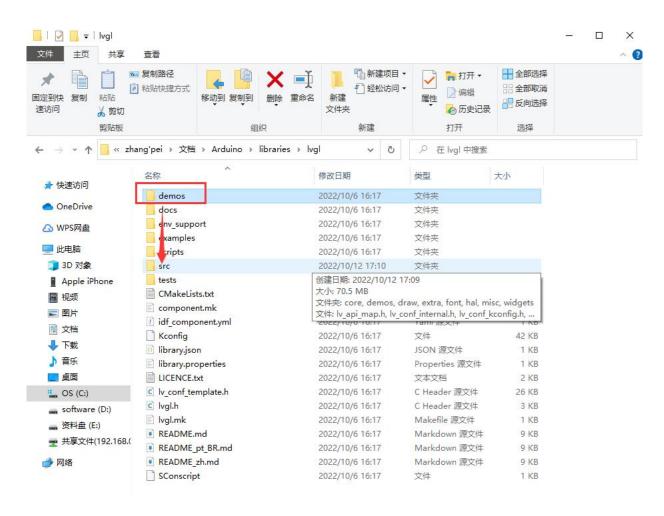

After compiling, you can run LVGL and touch normally.