

Special notes :

In order for users to read this user manual,we delete all complicated operations for easy of use. If any questions in using, please contact with us.

Thanks for using our products!

—. Decode to Restore the Factory Default



Access Setting



Decode to Restore the Factory Default

Note: All the settings can be decoded to restore their factory defaults by reading
Access Setting-->Decode to Restore the Factory Default--> Quit Setting.



Quit Setting



Access Setting

☰ : Communication Interface Settings



USB Virtual Keyboard



USB virtual serial port



Rs232 serial port

☰ : Scan Mode Settings



Manual mode



Automatic Mode



Quit Setting



Access Setting

四. Enable and Disable Bar Codes



Enable All the Bar Codes



Disable All the One
-dimensional Bar Codes



Enable All the One
-dimensional Bar Codes



Disable All the Two
-dimensional Bar Codes



Enable All the Two-
dimensional Bar Codes



Quit Setting



Access Setting

五. Set Enter



Do Not Enter



Enable the Suffixes



Enter

Note: 1. You can choose not to press enter by sequentially scanning the bar codes of Access Setting, Do Not Enter, and Quit Setting.

2. You can choose to press enter by sequentially scanning the bar codes of Access Setting, Enter, and Enable the Suffixes



Quit Setting



Access Setting

六. Set Line Skipping



Enable the Suffixes



Line Skipping

Note: You can add the skipped line by sequentially scanning the bar codes of Access Setting, Enable the Suffixes, and Line Skipping.



Quit Setting



Access Setting

七. Set Prefixes



Disable Prefixes



Enable Prefixes



Set Prefixes

Note: The process of setting the prefixes such as "A" of the bar codes is as follows:
Sequentially Read: Access Setting-->Enable Prefixes-->Parameter Bar Code 4-->
Parameter Bar Code 1--> Save Setting-->Quit Setting. Please refer to the Table of
Parameter Bar Codes and their Corresponding Characters when setting the characters.



Quit Setting



Access Setting

八. Set Suffixes



Disable Suffixes



Enable Suffixes



Set Suffixes

Note: The process of setting the suffixes such as “B” of the bar codes is as follows:
Sequentially Read: Access Setting-->Enable Suffixes-->Parameter Bar Code 4
--> Parameter Bar Code 2--> Save Setting-->Quit Setting. Please refer to the
Table of Parameter Bar Codes and their Corresponding Characters when setting
the characters.



Quit Setting

九. Parameter Bar Code



0



1



2



3



4



5



6



7



8

8



9



A



B



C



D



E



F



Save Setting



Cancel the Currently Set Data



Cancel the Currently Set
Data String



Cancel the Current Setting



Quit Setting

†. Table of Parameter Bar Codes and their Corresponding Characters

Parameter Bar Code	Corresponding Character	Parameter Bar Code	Corresponding Character	Parameter Bar Code	Corresponding Character	Parameter Bar Code	Corresponding Character	Parameter CoBar de	Corresponding Character
2 d	-	4 4	D	5 b	[7 2	r	2 b	+
2 e	.	4 5	E	5 c	\	7 3	s	2 c	,
2 f	/	4 6	F	5 d]	7 4	t		
3 0	0	4 7	G	5 e	^	7 5	u		
3 1	1	4 8	H	5 f	-	7 6	v		
3 2	2	4 9	I	6 0	,	7 7	w		
3 3	3	4 a	J	6 1	a	7 8	x		
3 4	4	4 b	K	6 2	b	7 9	y		
3 5	5	4 c	L	6 3	c	7 a	z		
3 6	6	4 d	M	6 4	d	7 b	{		
3 7	7	4 e	N	6 5	e	7 c			
3 8	8	4 f	O	6 6	f	7 d	}		
3 9	9	5 0	P	6 7	g	7 e	~		
3 a	:	5 1	Q	6 8	h	2 1	!		
3 b	;	5 2	R	6 9	i	2 2	"		
3 c	<	5 3	S	6 a	j	2 3	#		
3 d	=	5 4	T	6 b	k	2 4	\$		
3 e	>	5 5	U	6 c	l	2 5	%		
3 f	?	5 6	V	6 d	m	2 6	&		
4 0	@	5 7	W	6 e	n	2 7	'		
4 1	A	5 8	X	6 f	o	2 8	(
4 2	B	5 9	Y	7 0	p	2 9)		
4 3	C	5 a	Z	7 1	q	2 a	*		

十一. Basic Settings of Typical Bar Codes

ENA-8 Setting



Do Not Transfer
Identifying Character



Read 2-digit Extension Code



Read 5-digit
Extension Code

EAN-13 Setting



Do Not Transfer
Identifying Characters



Read 2-digit Extension Code



Read 5-digit
Extension Code

UPC - E Setting



Do Not Transfer
Identifying Characters



Read 2-digit Extension Code



Read 5-digit
Extension Code

UPC -A Setting



Do Not Transfer
Identifying Characters



Read 2-digit Extension Code



Read 5-digit
Extension Code

Code39 Setting



Do Not Transfer the Initial
Character and the Terminator



Read Full-ASCII Character



Do Not Read Full
-ASCII Character

Codabar Setting



Do Not Transfer the Initial
Character and the Terminator

Code 11 Setting



Do Not Transfer Identifying Character

Aztec Setting



Start

About the Warranty

- I. Since you buy our product with this card, you can enjoy the service of one year repair and lifelong maintenance for the rubber and plastic parts of the barcode scanner, 6 months repair service for the battery and the charger, and 3 months repair service for the data cable. During the repair period, the maintenance of the product is free. Expire the warranty, we will charge the replaced components and maintenance cost.
- II. If the product belongs to one of the below situations and verified by manufacturer, the user can't enjoy the free maintenance service:
- a. Expire the warranty period;
 - b. The barcode scanner body is disassembled or the camera of the scanner is damaged;
 - c. The surface or internal component of the scanner is seriously damaged;
 - d. The product is damaged due to the wrong installation or operation;
 - e. The serial number of the scanner is altered or does not confirm to the number written on the card.
 - f. The scanner is damaged due to an artificial fault. For instance, it is inundate.
 - g. The scanner is damaged due to natural disasters, e.g. fire disaster, flood and thunder stroke.
 - h. The working or storage environment of the product, e.g. temperature or humidity, does not conform to the requirements in Operation Manual.

Thank You For Choosing Our Products !

User Information	Name	
	Address	
	Zipcode	
	Tel	
	Email	

Distributor Information	Name	
	Address	
	Zipcode	
	Operator Signature	
	Distributor Seal	

Barcode Reader Warranty Card

Part No.	
Serial No.	
Purchase Date	

Appendix

Accessories Name	Quantity
Scanner	1
U Type Receiver	1
USB Charge Cable	1
Manual	1

Maintenance Record List

Date	Fault Description	Maintenance Record	Operator

Please make sure to read the instructions about maintenance carefully at the back of the card, fill out various data above carefully and the file is valid only if it is signed with the official seal of the authorized dealer.