

Barcode Scanner

Manual Guide



Restore Defaults

If the scanner can not work normally, Pls scan "Restore Defaults".

End Mark



None



CR



LF+CR



TAB



LF



ETX

Buzzer Setup



Volume-ON*



Volume-OFF



High Volume*



Low Volume

Trigger Mode



Continuous Mode



Auto-Sensing Mode

Capital & Lowercase Setup



No Swap*



No Swap*



All Lowercase



All Capital

Reverse Code Reading

Turning on this setting will affect the scanning speed, please turn it on while you need to use



ON



OFF

Duplicate Barcode Upload Setup



Duplicate Detection-ON
(Auto-Sensing Mode)



Duplicate Detection-OFF*
(Auto-Sensing Mode)



Delay forever
(Auto-Sensing Mode)



Delay 3s
(Auto-Sensing Mode)



Duplicate Detection-ON
(Continue Scan Mode)



Duplicate Detection-OFF*
(Continue Scan Mode)



Delay forever
(Continue Scan Mode)



Delay 3s
(Continue Scan Mode)

Invoice Function



Invoice Function-ON



Invoice Function-OFF

Interface setup



HID-KBW



USB COM



TTL 232-9600, NO, 8, 1 -Default



1200



2400



4800



9600



14400



19200



38400



57600



115200



Check Bit-OFF



Even



Odd

Language Setup



UNITED STATES



FRANCE



ITALY



GERMANY



SPAIN



TURKEY_Q



UNITED KINGDOM



BELGIUM



PORTUGUESE_PORTUGAL



PORTUGUESE_BRAZIL



HUNGARY



TURKEY_F



GREECE



SWEDEN





POLISH_PROGRAM



NETHERLANDS



JAPAN



THILAND



CROATIA



ROMANIA



BULGARIA



SLOVAKIA



NORTH KOREA

Add Prefix



Display Prefix-OFF



Display Prefix-ON



Add Prefix

E.g. The bar code content is "123456789", add X and Y before the bar code(Check ASCII Barcode Table, X=58, Y=59), "XY123456789" will be shown.

Please scan the following code in order:

"Display Prefix-ON">"Add Prefix">Parameter

Code"5","8","5","9">"Save settings"

Add Suffix



Display Suffix-OFF



Display Suffix-ON



Add Suffix

E.g. The bar code content is "123456789", add X and Y after the bar code(Check ASCII Barcode Table, X=58, Y=59), "123456789XY" will be shown.

Please scan the following code in order:

"Display Suffix-ON">"Add Suffix">Parameter

Delete Characters



Delete Characters-OFF



Delete Characters-ON



Before Barcode



After Barcode

E.g. The bar code content is "123456789", if you want to set the scanner to delete the number 1, "23456789" will be shown.

Please scan the following code in order:

"Delete Characters-ON">"Before Barcode">"Parameter Code
"0">"Parameter Code "1">"Save settings"

Appendix 1: Parameter Code



0



1



2



3



4



5



6



7



8



9



A



B



C



D



E



F



Save settings

ASCII

He	De	Description	He	De	Descripti	He	De	Descripti
00	0	NUL	2B	43	+	56	86	V
01	1	SOH	2C	44	,	57	87	W
02	2	STX	2D	45	—	58	88	X
03	3	ETX	2E	46	.	59	89	Y
04	4	EOT	2F	47	/	5A	90	Z
05	5	ENQ	30	48	0	5B	91	[
06	6	ACK	31	49	1	5C	92	\
07	7	BEL	32	50	2	5D	93	]
08	8	BS(Backspa	33	51	3	5E	94	^
09	9	HT(Tab)	34	52	4	5F	95	
0A	10	LF(CTRL J)	35	53	5	60	96	`
0B	11	VT(CTRLK)	36	54	6	61	97	a
0C	12	FF(CTRL)	37	55	7	62	98	b
0D	13	CR(Enter)	38	56	8	63	99	c
0E	14	SO(CTRL N)	39	57	9	64	10	d
0F	15	SI(CTRL O)	3A	58	:	65	10	e
10	16	DLE(CTRLP)	3B	59	;	66	10	f
11	17	DC1(CTRL	3C	60	<	67	10	g
12	18	DC2(CTRL	3D	61	=	68	10	h
13	19	DC3(CTRL	3E	62	>	69	10	i
14	20	DC4(CTRLT	3F	63	?	6A	10	j
15	21	NAK(CTRL	40	64	@	6B	10	k
16	22	SYN(CTRL	41	65	A	6C	10	l
17	23	ETB(CTRL	42	66	B	6D	10	m
18	24	CAN(CTRL	43	67	C	6E	11	n
19	25	EM(CTRL Y)	44	68	D	6F	11	o
1A	26	SUB(CTRL	45	69	E	70	11	p
1B	27	ESC(ESC)	46	70	F	71	11	q
1C	28	FS(CTRL \)	47	71	G	72	11	r
1D	29	GS(CTRL)	48	72	H	73	11	s
1E	30	RS(CTRL ^)	49	73	I	74	11	t
1F	31	US(CTRL)	4A	74	J	75	11	u
20	32	(space)	4B	75	K	76	11	v
21	33	!	4C	76	L	77	11	w
22	34	"	4D	77	M	78	12	x
23	35	#	4E	78	N	79	12	y
24	36	\$	4F	79	O	7A	12	z
25	37	%	50	80	P	7B	12	{
26	38	&	51	81	Q	7C	12	
27	39	'	52	82	R	7D	12	}
28	40	(	53	83	S	7E	12	~
29	41	)	54	84	T	7F	12	DEL
2A	42	*	55	85	U			

