


Quick installation guide of Eco PI Pro LP/HP v1.0

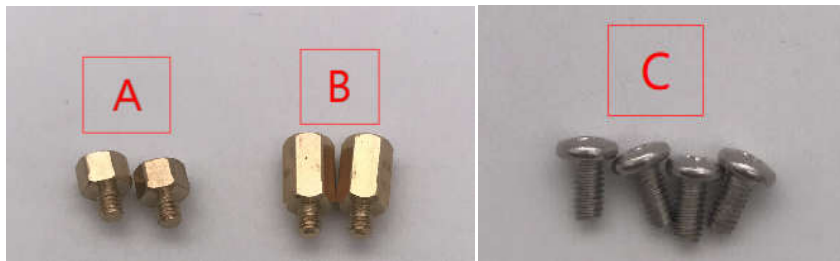


Step 1,

Remove the four screws to disassemble the heat sink.



Step 2,


Mount 2pcs of copper bolt A and 2pcs of copper bolt B at the designated positions on the heat sink.

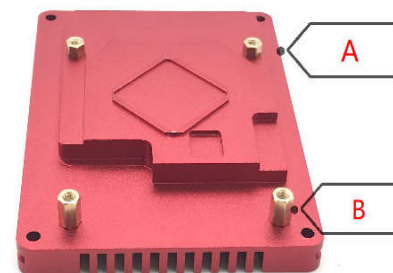

Put the heat conductive paste in the designated CPU space in the middle of the the heatsink.
(less is more – please only place a small drip in the center!)

Step 3,

Place the Rock PI board on the heat sink, adjust the holes and fix it with 4pcs of screw C

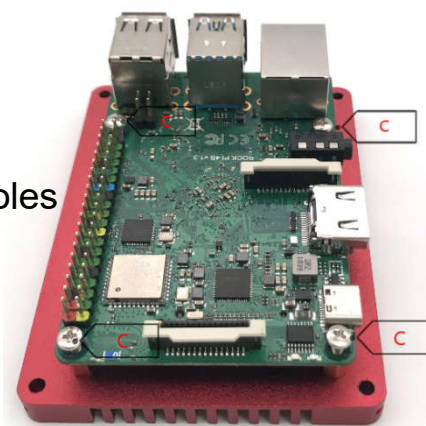

Step 4,

Finish the assembly with placing the cover on top and fix it with the 4 screws through the heat sink.



Finally use the 4 silicon feet and stick them next to the screws. The additional height will support the air flow through the heat sink on the bottom.